

ENGINEERING POLYMERS: THE 'TOP TEN' INJECTION MOULDING PROBLEMS

R. Wilkinson, E.A. Poppe, K. Leidig and K. Schirmer



Part 9: Warpage


1. Moisture in the granules
2. Feed system too small
3. Wrong gate position
4. Hold time too short
5. Wrong melt temperature
6. Wrong tool temperature
7. Poor surface finish
8. Problems with hot runners
9. Warpage
10. Mould deposit

Partially crystalline substances such as POM (acetal), PA (nylon), PBT and PET (polyesters) tend to warp far more than amorphous ones. This point should be taken into consideration already when designing moulds and mouldings. If this is not done, it is almost impossible to rectify at a later stage. This article discusses the causes of warpage and steps that can be taken to prevent and reduce it.


What are the main causes of warpage?

Shrinkage is relatively high in partially crystalline materials and is influenced by a number of factors. In the case of unreinforced materials, warpage is greatly influenced by wall thickness and mould surface temperature. It follows that major differences in wall thickness and unsuitable mould temperatures will cause the moulding to warp. Totally different shrinkage characteristics will be evident in the case of glass fibre reinforced materials, due to orientation of the glass fibres. The effect of wall thickness differences on shrinkage is relatively slight. Here, the main cause of warping is the difference between fibre orientation longitudinally and at right angles to the direction of flow. Warpage is essentially due to wall thickness distribution, gate location, flow restrictions and by-passes, as well as the inherent rigidity of the moulded part.


These different causes of warping, depending on whether the material is fibre-reinforced or not, frequently result in contrary warping phenomena in the same part.

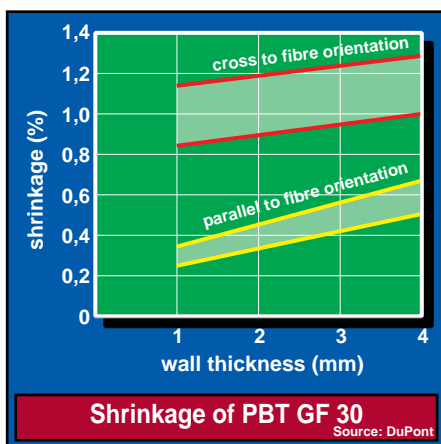


9.1

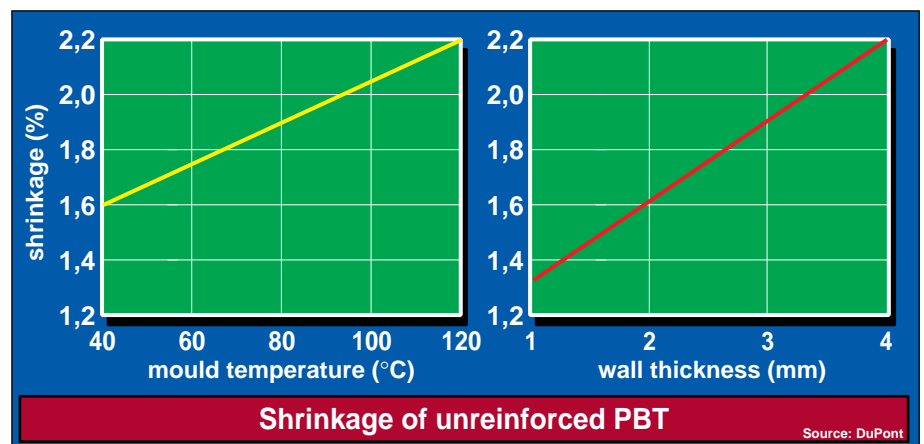


9.2

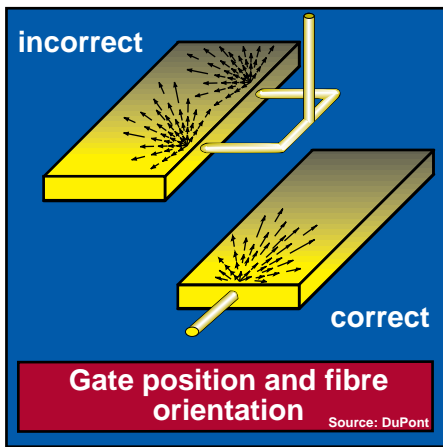

9.3

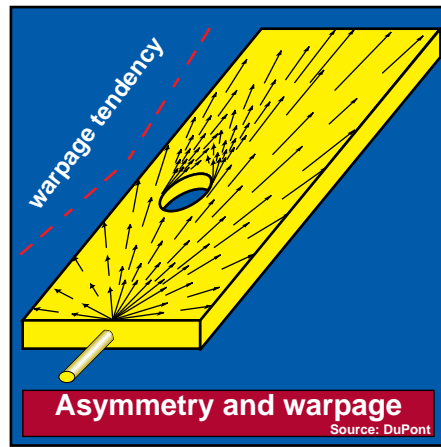

9.4

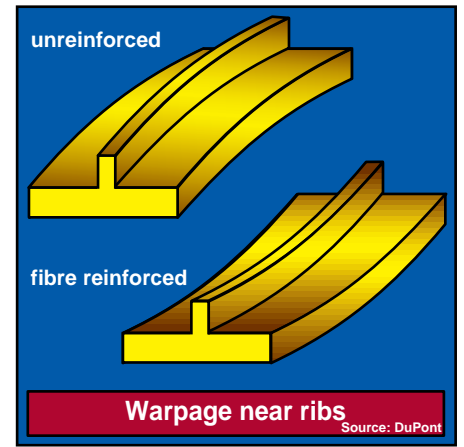

9.5

How can warpage be prevented?


Unreinforced materials require uniform wall thicknesses. Melt accumulations should be avoided as far as possible. Multi-point gating can be used to achieve a high pressure gradient and thus reduce shrinkage differences to a minimum. The mould heating system should be designed so that heat is dissipated as evenly as possible (see No. 6 of this series of articles).

With glass fibre reinforced materials, the symmetry of the moulded part is as important as uniform wall thickness. Asymmetrical parts hinder melt flow and thus orientation, and eventually cause warpage. In the case of asymmetrical parts it is therefore necessary to achieve a balance by incorporating blind cores at the mould planning and design stage. The position of the gate is also important – every by-pass and every weld line is a potential cause of warping.

What possibilities are open to the moulder?

Assuming that the moulded part, the gate and the mould have all been correctly designed, the moulder can control warpage up to a point via the holding pressure and mould temperature. The use of several heating circuits to optimise heat dissipation is normal practice.

In the case of reinforced materials, changing the injection rate or lowering the mould temperature is a slight help. If the possibility of subsequent warpage has not been foreseen at the mould and moulded part design stage, this cannot be subsequently rectified by modifying moulding conditions.

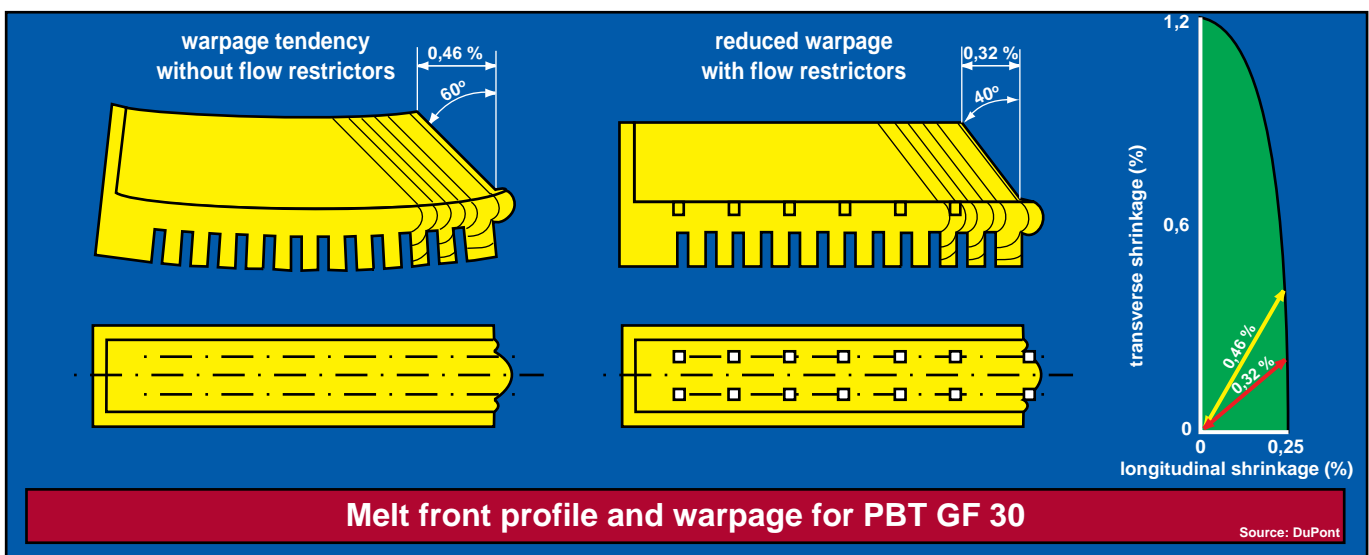

9.6

What can be done when warping has occurred?

The most important step, especially in the case of glass-fibre-reinforced materials, is to carry out a mould filling study, i.e. by partly filling the mould in several stages. By studying the melt front profile, fibre orientation can be reconstructed. By referring to the shrinkage curve for the reinforced material, measures can be taken to reduce warpage, e.g. by incorporating flow aids or flow restrictors. These alter the melt front profile, thereby influencing warpage.

This method requires a great deal of practical experience and, at the same time, increases the amount of knowledge to enable precautionary measures to be taken in future. It also has its limitations, due to the properties of the raw material and physical conditions. For crystalline polymers, it is not possible to obtain the same flatness as for amorphous polymers. In this connection, mention should be made of low-warpage, semi-crystalline polymer blends. These represent a compromise between properties and warpage, due to chemical modification or the combination of different reinforcing components. The last, and also the most expensive method consists of modifying the mould. If there already is experience with similar mouldings, correctable inserts are the best solution for critical parts.

EUROPE/MIDDLE EAST/AFRICA

Belgique / België
Du Pont de Nemours (Belgium)
Antoon Spinoystraat 6
B-2800 Mechelen
Tel. +32 15 44 14 11
Telefax +32 15 44 14 09

Bulgaria
Serviced by
Biesterfeld Interrowa GmbH & Co. KG.
See under Österreich.

Ceská Republika a
Slovenská Republika
Du Pont CZ, s.r.o.
Pekarska 14/268
CZ-155 00 Praha 5 – Jinonice
Tel. +42 257 41 41 11
Telefax +42 257 41 41 50-51

Danmark
Du Pont Danmark ApS
Skjøtevej 26
P.O. Box 3000
DK-2770 Kastrup
Telefax +45 32 47 98 05
Telefax +45 32 47 98 05

Deutschland
Du Pont de Nemours
(Deutschland) GmbH
Du Pont Straße 1
D-61343 Bad Homburg
Tel. +49 6172 87 0
Telefax +49 6172 87 27 01

Egypt
Du Pont Products S.A.
Bldg no. 6, Land #7, Block 1
New Maadi
ET-Cairo
Tel. +202 754 65 80
Telefax +202 516 87 81

España
Du Pont Ibérica S.A.
Edificio L'Ilia
Avda. Diagonal 561
E-08029 Barcelona
Tel. +34 227 60 00
Telefax +34 227 62 00

France
DuPont de Nemours (France) SAS
Défense Plaza
23/25 rue Delarivière Le Foullon
Défense 9
92 064 La Défense Cedex
Phone: +33 (0)1 41 97 44 00
Telefax +33 1 47 53 09 67

Hellas
Biesterfeld Hellas Intralink S.A.
Trading Establishment
149, AG, Triados Menidi Acharnes
GR-13671 Athens
Tel. +30 210 24 02 900
Telefax+30 210 24 02 141

Israël
Gadot Chemical Terminals (1985) Ltd.
16 Habonim Street
Netanya – South Ind. Zone
IL-42504 Netanya
Tel. +972 3 526 42 41
Telefax +972 3 528 27 17

Italia
Du Pont de Nemours Italiana S.r.L.
Centro Direzionale "Villa Fiorita"
Via Piero Gobetti, 2/A
20063 Cernusco s/N (MI)
Tel. +39 02 92629.1 (switchboard)
Fax +39 02 36049379

Magyarország
DuPont Magyarország Kft.
HU - 2040 Budaörs
Neuman J.u. 1
Tel. +36 23 509 400
Telefax: +36 23 509 432

Maroc
Deborel Maroc S.A.
40, boulevard d'Anfa – 10°
MA-Casablanca
Tel. +212 227 48 75
Telefax +212 226 54 34

Norway / Norge
Distrupol Nordic
Ostenssloveien 36
N-0677 Oslo
Tel. +47 23 16 80 62
Telefax +47 23 16 80 62

Österreich
Biesterfeld Interrowa GmbH & Co. KG
Bräuhausgasse 3-5
P.O. Box 19
AT-1051 Wien
Tel. +43 1 512 35 71-0
Fax +43 1 512 35 71-31
e-mail: info@interrowa.at
internet: www.interrowa.at

Polska
Du Pont Poland Sp. z o.o.
ul. Powazkowska 44C
PL-01-797 Warsaw
Tel. +48 22 320 0900
Telefax +48 22 320 0910

Portugal
Biesterfeld Iberica S.L.
Rua das Matas
P-4445-135 Alfena
Tel. +351 229 698 760
Telefax +351 229 698 769

Romania
Serviced by
Biesterfeld Interrowa GmbH & Co. KG.
See under Österreich.

Russia
DuPont Russia LLC.
ul. Krylatskaya 17/3
121614 Moscow
Tel. +7 495 797 22 00
Fax. +7 495 797 22 01

Schweiz / Suisse / Svizzera
Biesterfeld Plastic Suisse GmbH
Dufourstrasse 21
Postfach 14695
CH-4010 Basel
Tel. +41 61 201 31 50
Telefax +41 61 201 31 69

Slovenija
Serviced by
Biesterfeld Interrowa GmbH & Co. KG.
See under Österreich.

Suomi / Finland
Du Pont Suomi Oy
P.O. Box 54 (Keilaranta 12)
FI-02150 ESPOO
Tel: +358 207 890500
Fax: +358 207 890501

Sverige
Serviced by
Du Pont Danmark ApS.
See under Danmark.

Türkiye
Du Pont Products S.A.
Buyukdere Caddesi No. 122
Ozsezen Ismerkezi, A block, Kat: 3
Esentepe, 34394 Istanbul
Tel. +90 212 340 0400
Telefax +90 212 340 0430

Ukraine
Du Pont de Nemours
International S.A.
Representative Office
3, Glazunova Street
Kyiv 252042
Tel. +380 44 294 96 33 / 269 13 02
Telefax +380 44 269 11 81

United Kingdom
Du Pont (UK) Limited
Wedgwood Way
Stevenage
Hertfordshire SG1 4QN
Tel. +44 1438 734000
Telefax +44 1438 734109

South Africa
DuPont de Nemours
Societe Anonyme
South African Branch Office
4th Floor Outspan House
1006 Lenchen Avenue North
Centurion
Pretoria 0046
Tel. +27 0 12 683 5600
Telefax +27 0 12 683 5661

NORTH AMERICA

USA
DuPont Engineering Polymers
Barley Mill Plaza, Building 26
P. O. Box 800026
Wilmington, Delaware 19880
Tel. +1 302 992 4592
Telefax +1 302 992-6713

DuPont Automotive
950 Stephenson Highway
P.O. Box 7013
Troy, MI 48007-7013
Tel. +1 248 583-8000

Canada
DuPont Engineering Polymers
P.O. Box 2200
Streetsville, Mississauga
Ontario, Canada L5M 2H3
Tel. +1 905 821-5953

Mexico
DuPont S.A. de C.V.
Homero 206
Col. Chapultepec Morales
11570 Mexico D.F.
Tel. +5 255 557 221 000

SOUTH AMERICA

Argentina
Du Pont Argentina S.A.
Avda. Mitre y Calle 5
(1884) Berazategui-Bs.As.
Tel. +54 11 4239-3868
Telefax +54 11 4239-3817

Brasil
DuPont do Brasil S.A.
Al. Itapecuru, 506 Alphaville
06454-080 Barueri-Sao Paulo
Tel. + 5511 7266 8229

ASIA-PACIFIC

Australia
DuPont (Australia) Ltd.
168 Walker Street
North Sydney NSW 2060
Tel: +612 9923-6111
Fax: +612 9923 6011

Hong Kong/China
DuPont China Ltd.
26/F, Tower 6, The Gateway,
9 Canton Road
Tsimshatsui, Kowloon, Hong Kong
Tel: +852 2734 5345
Fax: +852 2724 4458

Shanghai/China
DuPont China Holding Co. Ltd.
15/F, Shui On Plaza
333 Huai Hai Road (Central)
Shanghai 200021
Tel: +86 21 6386 6366
Fax: +86 21 6386 6333

India
E.I. DuPont India Limited,
"Arihant Nitco Park" Sixth floor,
90, Dr. Radhakrishnan Salai,
Mylapore,
Chennai 600 004
Tel: +91 44 28472800
Fax: +91 44 28473800

Japan
DuPont Kabushiki Kaisha
Sanno Park Tower, 11-1
Nagata-cho 2-chome
Chiyoda-ku, Tokyo 100-6111
Japan.
Tel: +81 3 5521 8500
Fax: +81 3 5521 2595

Korea
DuPont (Korea) Ltd.
4/5 Floor, Asia Tower
#7/26, Yeoksam-dong, Kangnam-Ku
Seoul 135-082
Tel: +822 2222-5200
Fax: +822 2222-5470

Singapore
Du Pont Company (S) Pte Ltd
1 HarbourFront Place #11-01
HarbourFront Tower One
Singapore 098633
Tel: +65 6586 3688
Fax: +65 6272 7494

Taiwan
DuPont Taiwan Ltd.
Hung Kuo Building, 13th floor
#167 Tun Hwa North Road
Taipei 105
Tel: +8862 2719-1999
Fax: +8862 2719-0852

Thailand
DuPont (Thailand) Limited
6-7th Floor, M. Thai Tower
All Seasons Place
87 Wireless Road
Lumpini, Phatumwan
Bangkok 10330
Tel: +66 2 659 4000
Fax: +66 2 659 4001

CRASTIN® PBT
THERMOPLASTIC
POLYESTER RESIN

DELTRIN®
ACETAL RESIN

HYTREL®
THERMOPLASTIC
POLYESTER ELASTOMER

MINLON®
MINERAL REINFORCED
NYLON RESIN

RYNITE® PET
THERMOPLASTIC
POLYESTER RESIN

THERMX® PCT
HIGH PERFORMANCE POLYESTER

TYNEX®
NYLON MONOFILAMENT

VESPEL®
PARTS AND SHAPES

ZYTEL®
NYLON RESIN

ZYTEL® HTN
HIGH PERFORMANCE
POLYAMIDE

ZENITE® LCP
LIQUID CRYSTAL POLYMER

DUPONT® ETPV
THERMOPLASTIC RUBBER
THAT RESISTS OIL & HEAT

The DuPont Oval Logo, DuPont™, The miracles of science™, and Crastin®, Deltrin®, DuPont® ETPV, Hytrel®, Minlon®, Rynite®, Thermx®, Tynex®, Vespel®, Zytel®, Zenite® are registered trademarks or trademarks of DuPont or its affiliates.

The information set forth herein is furnished free of charge and is based on technical data that DuPont believes to be reliable. It is intended for use by persons having technical skill at their own discretion and risk. DuPont makes no warranties, express or implied, and assumes no liability in connection with any use of this information.

©2007 E.I. du Pont de Nemours and Company



The miracles of science™